



Pos.	Artikelbeschreibung	Description of item	Artikel Nr./Item No.
1	Gehäuse	Housing	01002018
2	Blende, links	Left panel	01002019
3+4	Knebel z. Auswurf	Lift knob	01002012
6	Hauptplatine	Mainboard	010020110
8	Bodenplatte	Bottom plate	010020111
10	Fuß	Base	010020112
11	Arretierung m. Befestigung	Lock w. fixing	E01002021
12	Stopfen, Gummi	Stopper, rubber	01002011
13	Anschlussklemme	Terminal clamp	010020113
14	Blende, rechts	Right panel	010020114
15	Leiste	Panel	010020115
16-17	Krümelschublade	Crumb tray	01002014
19-21	Knebel	Knob	01002013
22	Elektronik m. Potentiometer	Electronics w. potentiometer	=> Pos. 010020110
23	Zugentlastung	Strain relief	010020116
24-27	Brötchenaufsatz	Warming rack f. toaster	01002015



Toaster, 2 Scheiben
 Artikel-Nr.: 100201

Ersatzteilliste
 23.06.2014